

Default Encoder Assignments

Each of the different engines have slightly different functions for the encoders but this should give you a list of the most common ones.

You can change them but this will give you a point of reference.

JD1

D0/D1 = LF0 Rate
D2/D3 = Envelope Release
D4/D5 = LF0 Depth
D6/D7 = Menu

JD2

D0/D1 = Oscillator Sustain
D2/D3 = Envelope Decay
D4/D5 = Oscillator Release
D6/D7 = Envelope Sustain

JD3

D0/D1 = Oscillator Attack
D2/D3 = Envelope Depth
D4/D5 = Oscillator Decay
D6/D7 = Envelope Attack

JD4

D0/D1 = ????
D2/D3 = Filter Cutoff
D4/D5 = Oscillator Delay
D6/D7 = Filter Resonance

From:

<http://wiki.midibox.org/> - **MIDIbox**

Permanent link:

http://wiki.midibox.org/doku.php?id=default_encoder_assignments

Last update: **2011/09/17 17:27**

