

# MIDIBox AY 3 8912 - VOLUME MENU

## Volume respectively Amplitude control:

\* Press **F4** (F3 + SHIFT) FOR THE **USER VOLUME** MENU

::.

TONE	USER VALUE	CC7(A)/CC8(B)/CC9(C)	MIDI VALUE	VELOCITY	ENVELOPE MODE
	priority 4	priority 3		priority 2	priority 1
VOLUME CH. A	0 to 15	0 to 127 ⇒ coversation to 0-15		ON/OFF	ON/OFF
VOLUME CH. B	0 to 15	0 to 127 ⇒ coversation to 0-15		ON/OFF	ON/OFF
VOLUME CH. C	0 to 15	0 to 127 ⇒ coversation to 0-15		ON/OFF	ON/OFF

::.

## VOLUME CH. ABC - USER VALUE

Just adjust the USER VOLUME VALUE here.

::.

## CONTROL CHANGE 7,8 and 9 (MIDI CC EVENTS)

A CC7 (VOLUME A), CC8 (VOLUME B) and CC9 (VOLUME C) MIDI event overwrites the USER VOLUME VALUE (0-15) directly. But the CC Value will only apply if the VELOCITY and the ENVELOPE mode is off. The MIDIBox AY 3 8912 CC LIST ⇒ [MIDIBox\\_AY\\_3\\_8912\\_CC\\_LIST](#)

::.

## ENVELOPE TO TONE ABC ON/OFF (ENVELOPE MODE ON)

There will be a [ENV.ON] @ Tone A or B or C on the User **Volume Control Menu** instead of the volume value if the ENVELOPE MODE is activated. If the ENVELOPE MODE is in force the Volume Value will be overwritten. For more Information about the ENVELOPE MODE see ⇒ [ENVELOPE \(MENU\)](#)

::.

## VELOCITY TO TONE ABC ON/OFF (VELOCITY MODE ON)

If the VELOCITY MODE is activated there will be a [VELOCITY] @ Tone A, B or C on the **User Volume Control Menu** instead of the volume value. In this case the Volume Value will be overwritten by the VELOCITY Value. Note: if VELOCITY + ENVELOPE Mode is activated the ENVELOPE MODE is in effect.

::.


## MANUAL VOLUME CONTROL

See ⇒ [midibox\\_ay\\_3\\_8912\\_mixer](#)

:::

[18.11.2008]

From:  
<http://midibox.org/dokuwiki/> - **MIDIbox**

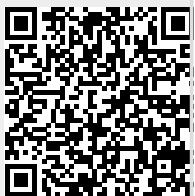

Permanent link:  
[http://midibox.org/dokuwiki/doku.php?id=midibox\\_ay\\_3\\_8912\\_volume&rev=1227018578](http://midibox.org/dokuwiki/doku.php?id=midibox_ay_3_8912_volume&rev=1227018578)

Last update: **2008/11/18 14:29**