

Coil Winder

REAL:



Triggermatrix 4

CODE, FIRMWARE

Install [MIOS Studio](#), connect a Core-Stm32F4 via USB, and Start the STUDIO

1. Upload [MIOS BOOTLOADER](#)

2. (only needet for Virgin Machines) type following commands into the MIOS-TERMINAL:

- set lcd_type GLCD_SSD1306_ROTATED
- set lcd_num_x 2
- set lcd_num_y 1
- set lcd_width 128
- set lcd_height 64
- store

3. Unzip [the Firmware](#), and Upload the project.hex

4. Unconnect USB & Connect the USB again — finished.

From:

<https://midibox.org/dokuwiki/> - **MIDIbox**

Permanent link:

<https://midibox.org/dokuwiki/doku.php?id=coilwinder&rev=1680466043>

Last update: **2023/04/02 20:07**

