

# Default Encoder Assignments

Each of the different engines have slightly different functions for the encoders but this should give you a list of the most common ones.

You can change them but this will give you a point of reference.

## JD1

```
D0/D1 = LF0 Rate  
D2/D3 = Envelope Release  
D4/D5 = LF0 Depth  
D6/D7 = Menu
```

## JD2

```
D0/D1 = Oscillator Sustain  
D2/D3 = Envelope Decay  
D4/D5 = Oscillator Release  
D6/D7 = Envelope Sustain
```

## JD3

```
D0/D1 = Oscillator Attack  
D2/D3 = Envelope Depth  
D4/D5 = Oscillator Decay  
D6/D7 = Envelope Attack
```

## JD4

```
D0/D1 = ????  
D2/D3 = Filter Cutoff  
D4/D5 = Oscillator Delay  
D6/D7 = Filter Resonance
```

[college essay](#)

From:  
<https://midibox.org/dokuwiki/> - **MIDIbox**

Permanent link:  
[https://midibox.org/dokuwiki/doku.php?id=default\\_encoder\\_assignments&rev=1310629885](https://midibox.org/dokuwiki/doku.php?id=default_encoder_assignments&rev=1310629885)



Last update: **2011/07/14 07:51**