

# BootLoader-Switch


when activated it will force Core32 to bootup in Bootload mode, doesnt matter how buggy your program is...

you need: 2x wires


2x 2Pin-Header

On-OFF Switch

solder this like in this Picture:

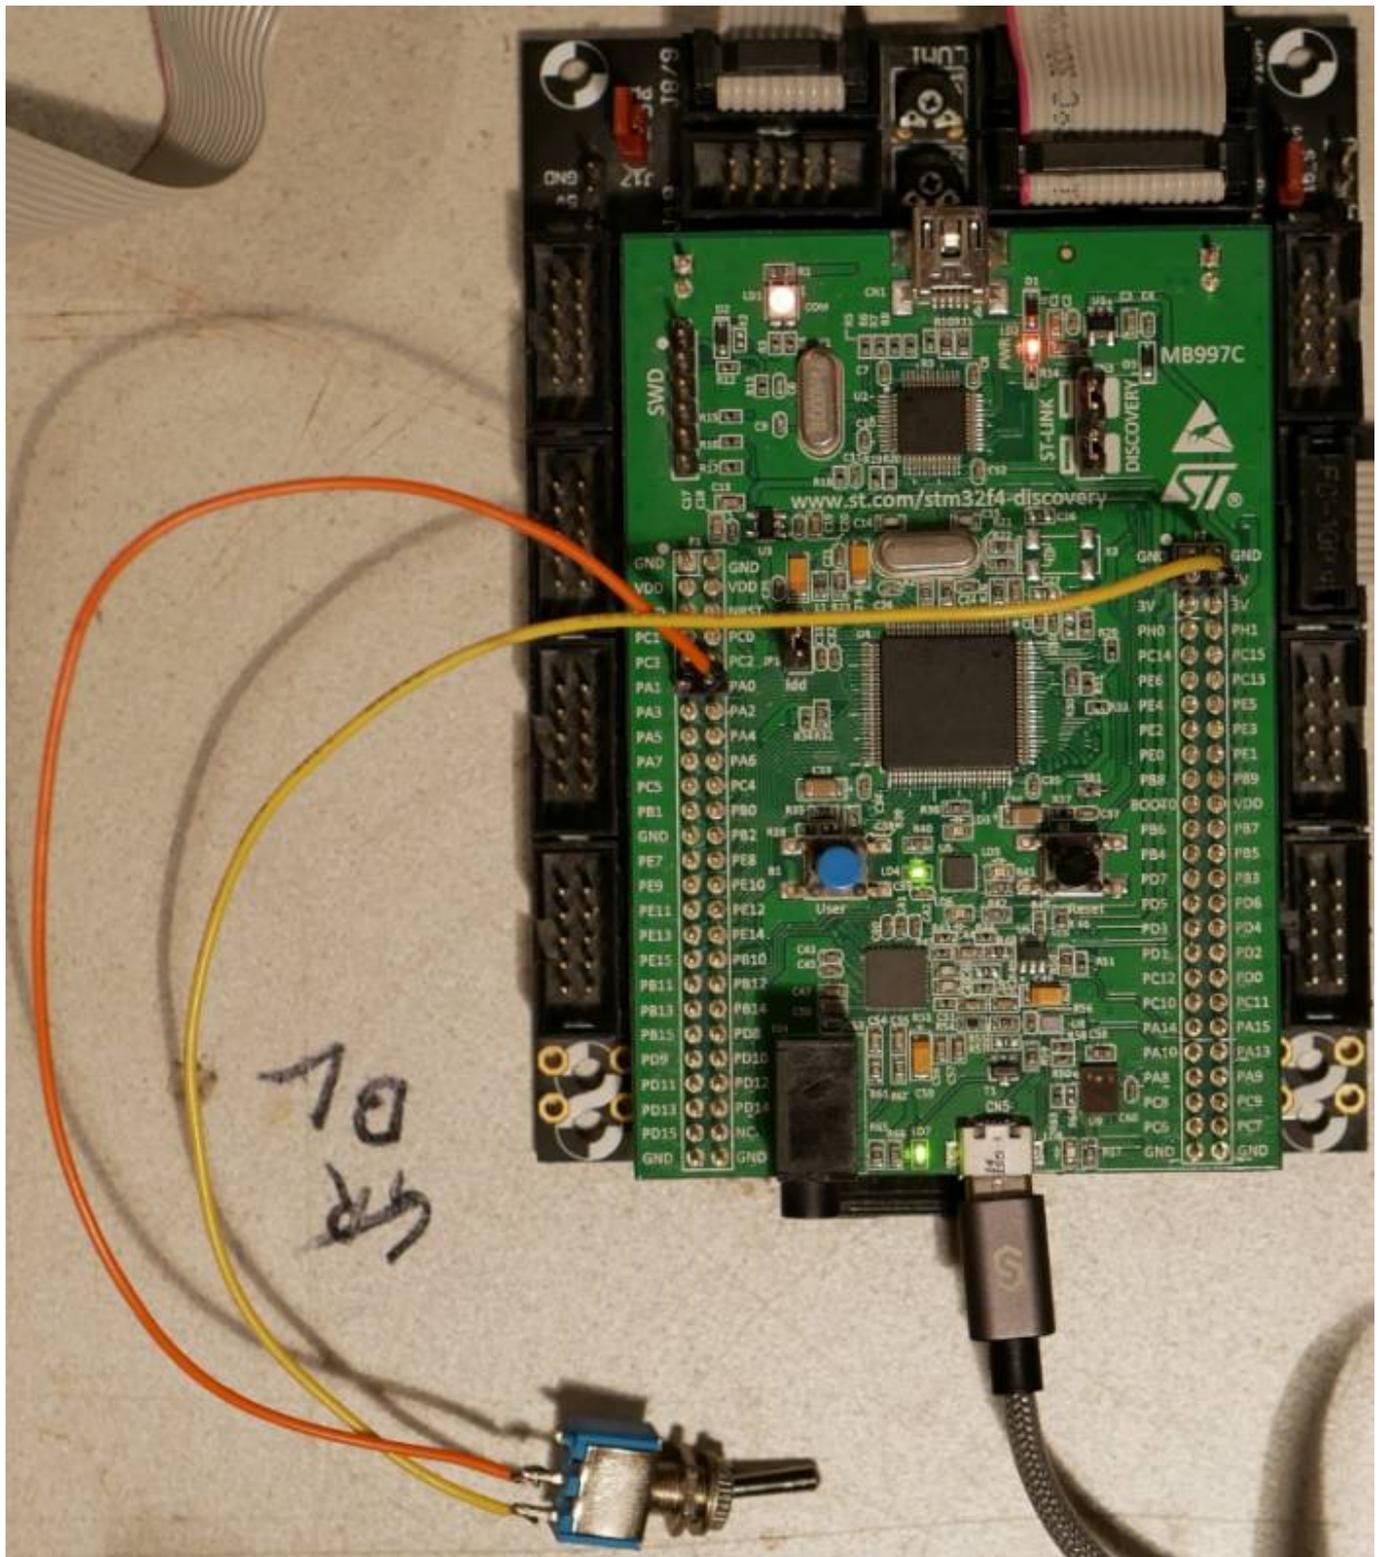

and connect it to following pins:

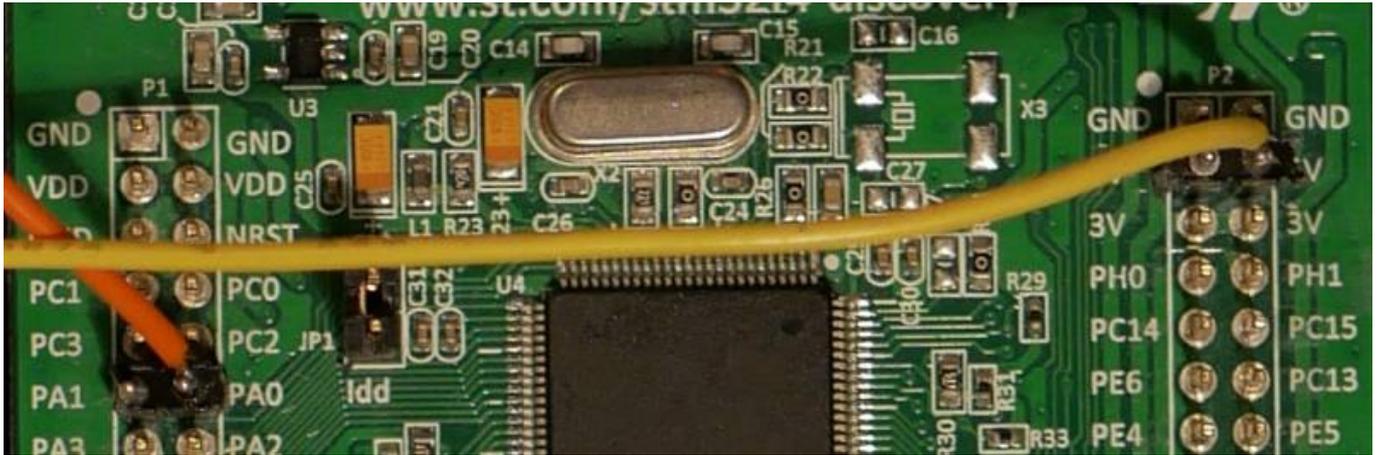

you maybe not need this, but when you need it, its good to have such switch on the backside of your midibox (@least when uploading, buggy betas, or you code your own program...)

From:  
<https://midibox.org/dokuwiki/> - **MIDIbox**

Permanent link:  
<https://midibox.org/dokuwiki/doku.php?id=home:mbhp:module:bootloader-switch&rev=1522613328>

Last update: **2018/04/01 20:08**

