

MIDIBox AY 3 8912 - ENVELOPE FEATURES

MIDIBox AY 3 8912 - ENVELOPE USER MENU

EP COARSE	0 to 255
EP FINE	0 to 255
ENV.SHAPE	0 to 15
ENV.TOGGLE	A B C

⋮

ENVELOPE ON/OFF TONE A, B and C:

- PRESS **F5** TO VIEW ENVELOPE USER MENU OPTIONS
- Menu item: ENV.TOGGLE: [A, B, C]
- Toggle the ENVELOPE MODE for TONE A, B or C via Key A, B or C
- There will be **ENV.ON** @ Tone A or B or C on the **User Volume Control Menu** instead of the **volume value** if the **ENVELOPE MODE** is activated.
- For Envelope Midi Controller see ⇒ [midibox_ay_3_8912_cc_list](#)

⋮

::


:

ENVELOPE PERIOD CONTROL:

The AY 3 8912 Chip provide a 16bit Envelope period Control.

- Menu item: EP COASE: [0 to 255] (bit 8-15)
- Menu item: EP FINE : [0 to 255] (bit 0-7)

Press [+] or [-] for increase or decrease the **Envelope Period** value

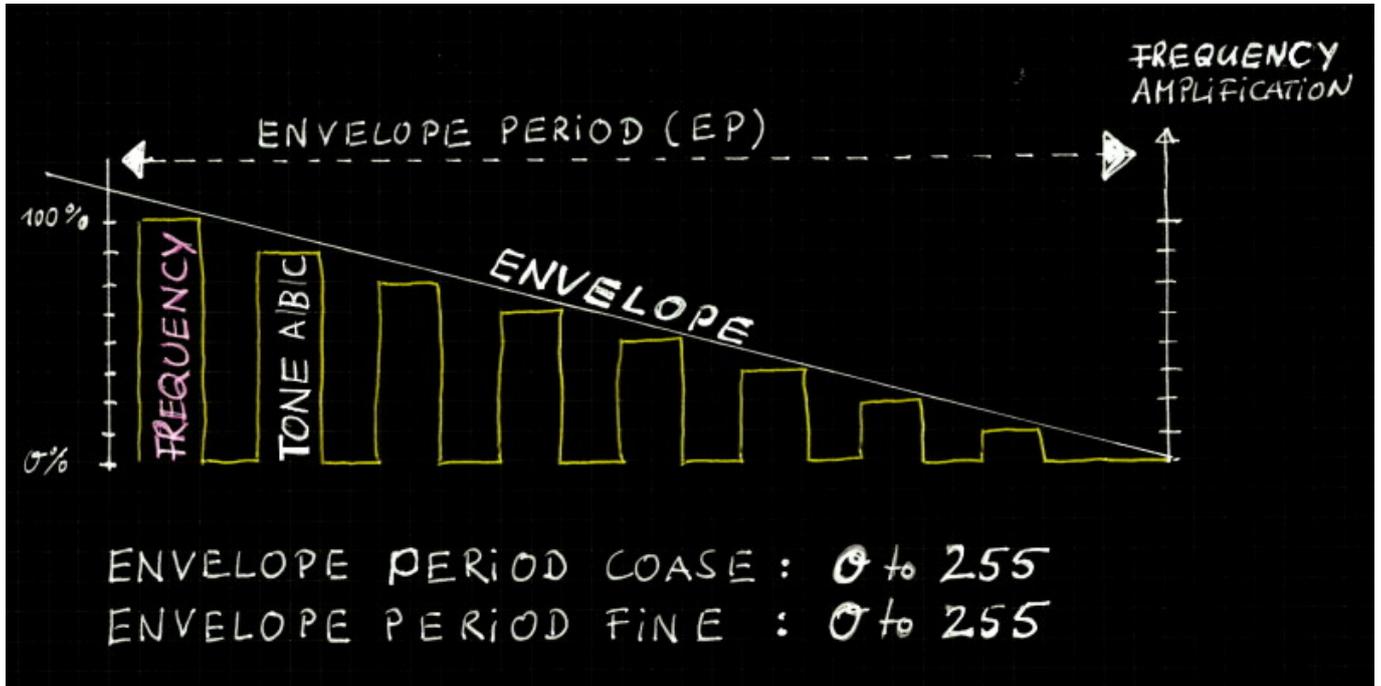

⋮
⋮
⋮


ENVELOPE SHAPE CONTROL:

- Menu item: ENV.SHAPE: [0 to 15]

Press [+] or [-]

ENVELOPE SHAPE/CYCLE CONTROL

ENVELOPE SHAPE

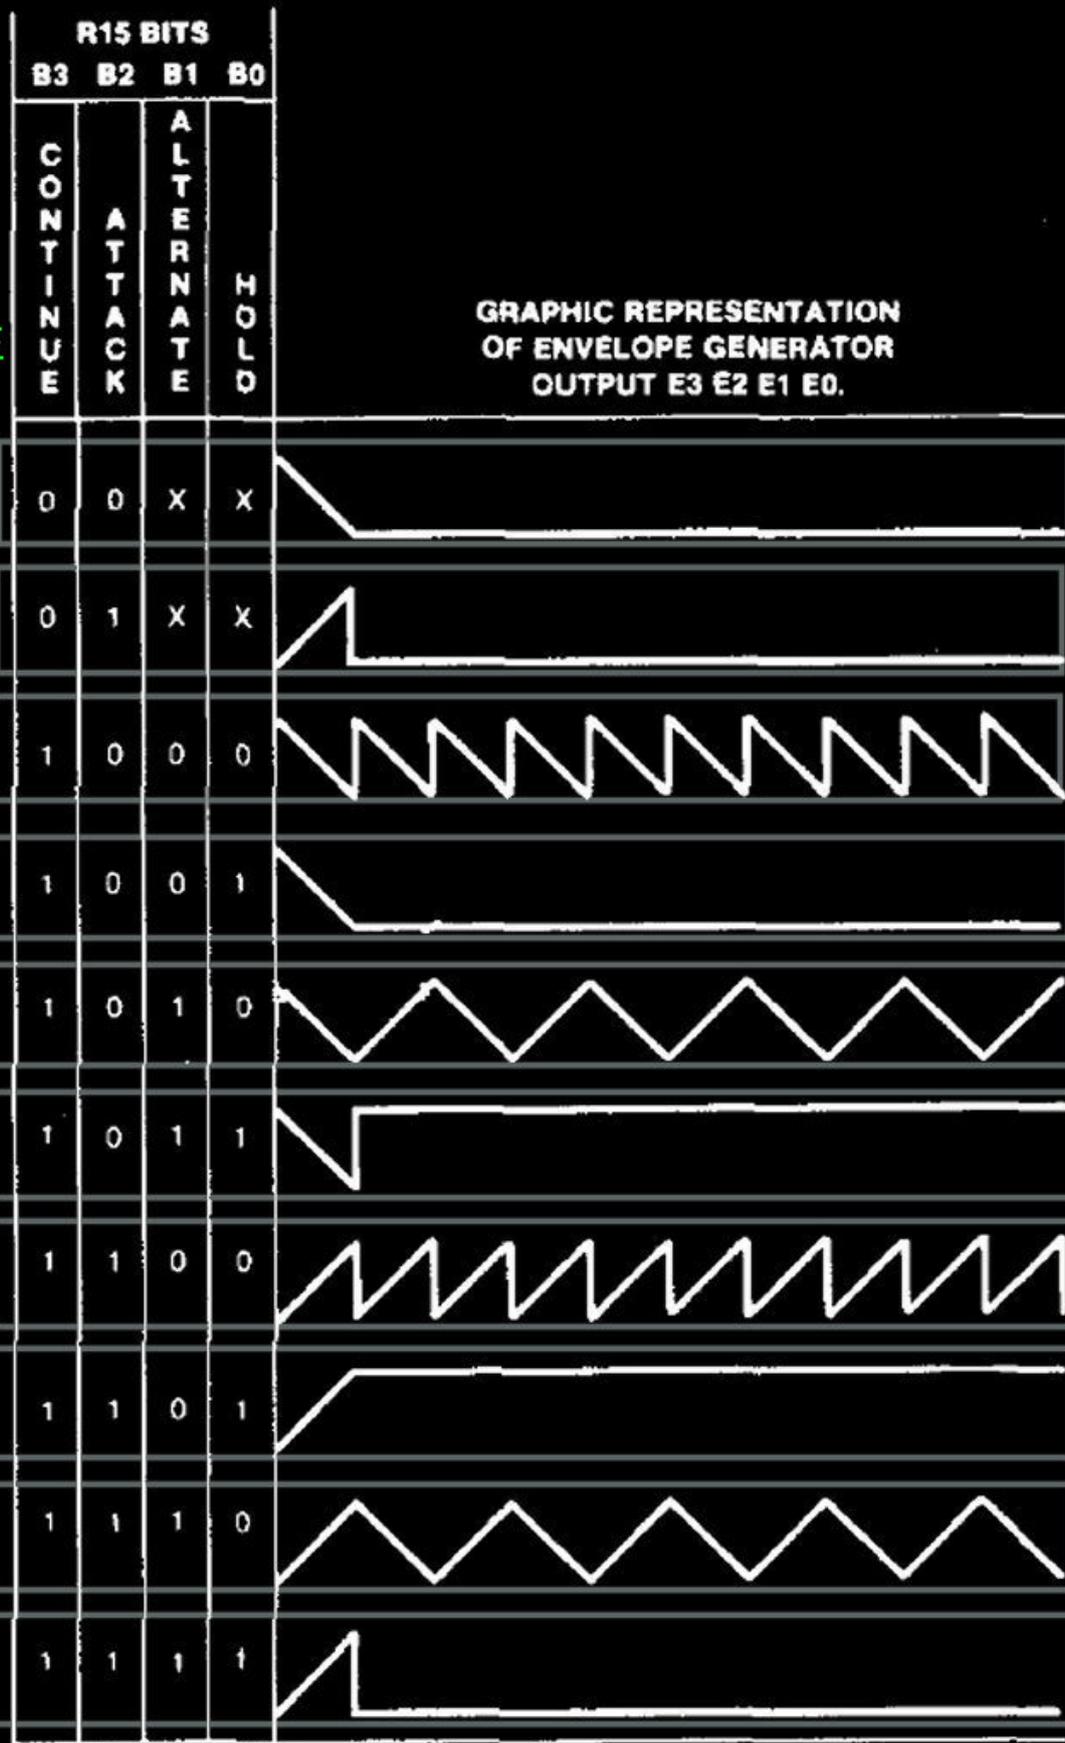

GRAPHIC REPRESENTATION OF ENVELOPE GENERATOR OUTPUT E3 E2 E1 E0.

EP IS THE ENVELOPE PERIOD (DURATION OF ONE CYCLE).

LCD VIEW: SHAPE [**C** ontinue | **A** t tack | **A** l ternate | **H** old] [0 to 15]

:::

::

:

[Date: 03.09.2008]

From:

<https://midibox.org/dokuwiki/> - **MIDIbox**

Permanent link:

https://midibox.org/dokuwiki/doku.php?id=midibox_ay_3_8912_envelope&rev=1245517221

Last update: **2009/06/20 17:00**

