

MIDIBox AY 3 8912 - VOLUME MENU

* Press **F4** (F3 + SHIFT) FOR THE **USER VOLUME MENU**

∴

| TONE | USER VALUE | CC7(A)/CC8(B)/CC9(C) MIDI VALUE | VELOCITY | ENVELOPE MODE |
|--------------|------------|---------------------------------|------------|---------------|
| | priority 4 | priority 3 | priority 2 | priority 1 |
| VOLUME CH. A | 0 to 15 | 0 to 127 ⇒ conversation to 0-15 | ON/OFF | ON/OFF |
| VOLUME CH. B | 0 to 15 | 0 to 127 ⇒ conversation to 0-15 | ON/OFF | ON/OFF |
| VOLUME CH. C | 0 to 15 | 0 to 127 ⇒ conversation to 0-15 | ON/OFF | ON/OFF |

∴

USER VALUE (VOLUME TONE ABC)

Adjust the USER VOLUME VALUE here.

∴

CONTROL CHANGE 7,8 and 9 (MIDI CC EVENTS)

A CC7 (VOLUME A), CC8 (VOLUME B) and CC9 (VOLUME C) MIDI event overwrites the USER VOLUME VALUE (0-15) directly. But the CC Value will only apply if the VELOCITY and the ENVELOPE mode is off. The MIDIBox AY 3 8912 CC LIST ⇒ [MIDIBox_AY_3_8912_CC_LIST](#)

∴

ENVELOPE TO TONE ABC ON/OFF (ENVELOPE MODE ON)

There will be a [ENV.ON] @ Tone A or B or C on the User **Volume Control Menu** instead of the volume value if the ENVELOPE MODE is activated. If the ENVELOPE MODE is in force the Volume Value will be overwritten. For more Information about the ENVELOPE MODE see ⇒ [ENVELOPE \(MENU\)](#)

∴

VELOCITY TO TONE ABC ON/OFF (VELOCITY MODE ON)

If the VELOCITY MODE is activated there will be a [VELOCITY] @ Tone A, B or C on the **User Volume Control Menu** instead of the volume value. In this case the Volume Value will be overwritten by the VELOCITY Value. Note: if VELOCITY + ENVELOPE Mode is activated the ENVELOPE MODE is in effect.

∴

MANUAL VOLUME CONTROL

See ⇒ [midibox_ay_3_8912_mixer](#)

∴

[18.11.2008]

From:

<https://midibox.org/dokuwiki/> - **MIDIbox**

Permanent link:

https://midibox.org/dokuwiki/doku.php?id=midibox_ay_3_8912_volume&rev=1227018413

Last update: **2008/11/18 14:26**

