

# Force-To-Scale

[Forum Discussion Thread](#) - for comments, corrections, or questions about this article

The Force-To-Scale function quantizes all notes to fit into one of the predefined scales. [Here is a graphic showing all of the SEQ's predefined scales.](#)

You can define a global scale, and/or you can specify different scales for each of the Track Groups. Force-To-Scale configuration options are accessible by pressing MENU+FX (GP Button #10), and choosing "scale" from that menu. You'll see a screen that looks like this:

```
Control  Root      Selected Scale
Global  Keyb      3:Natural Minor
```

You can choose a fixed root note for the scale (E, G#, etc.), or you can choose "keyb". When set to "Keyb", the root note of the scale can be directly controlled by playing notes on a MIDI keyboard.

## Resources

- [Thread discussing how transposition/force-to-scale works on the SEQ](#) (disregard my posts, look at what TK said.)

From:  
<https://midibox.org/dokuwiki/> - **MIDIbox**

Permanent link:  
<https://midibox.org/dokuwiki/doku.php?id=mididocs:seq:forcescale&rev=1411321821>

Last update: **2014/09/21 17:50**

