
BootLoader-Switch


when activated it will force Core32 to bootup in Bootload mode, doesnt matter how buggy your progam is...

you need:
2x wires
2x 2Pin-Header
On-OFF Switch

solder this like shown here:

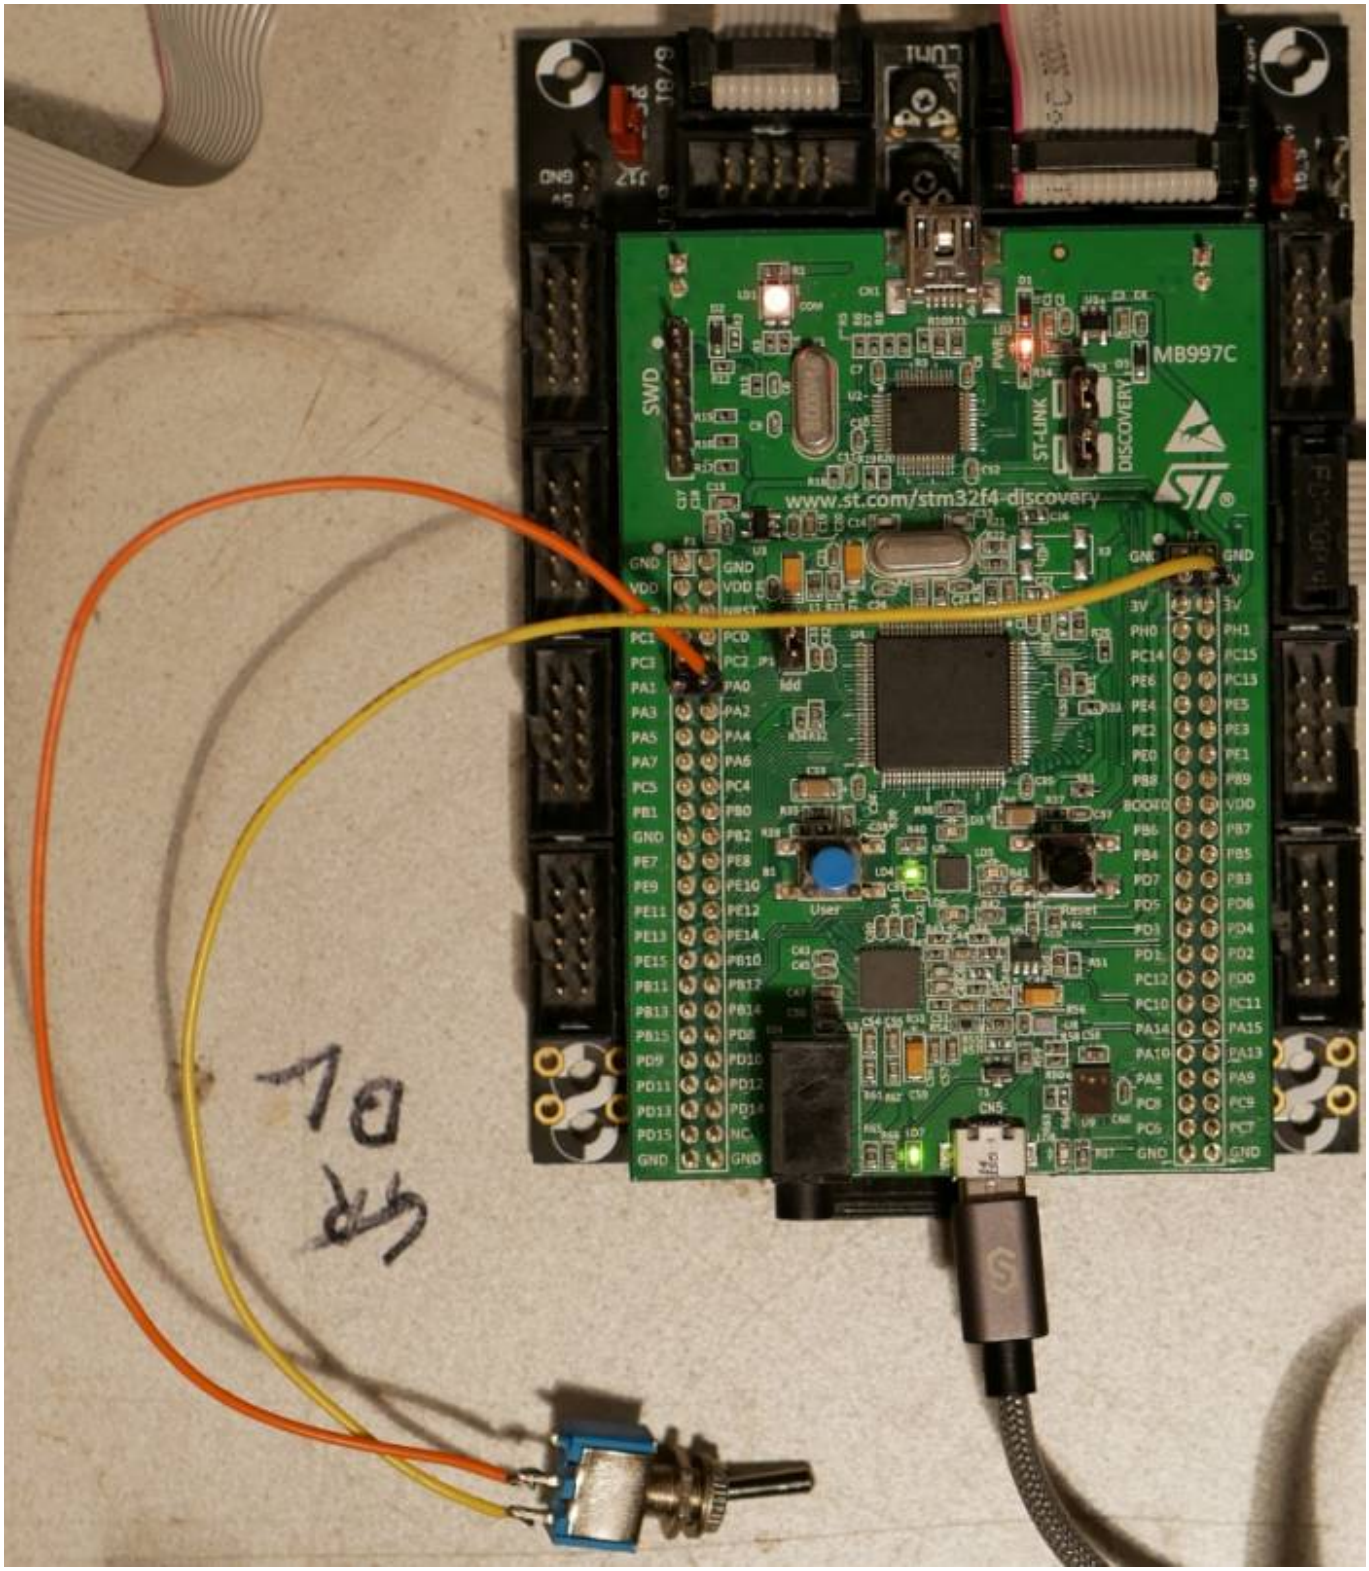

connect it to following pins:

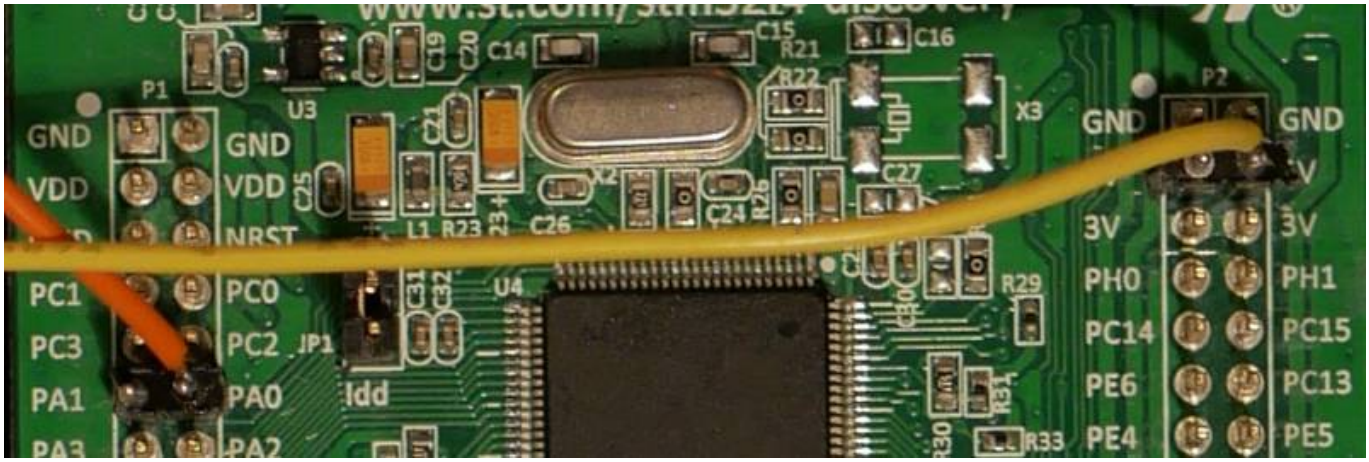

you maybe not need this, but when you need it, its good to have such switch on the backside of your midibox (@least when uploading, buggy betas, or you code your own program...)

greetings * **Phatline**

From:
https://midibox.org/dokuwiki/ - **MIDIbox**

Permanent link:
https://midibox.org/dokuwiki/doku.php?id=home:mbhp:module:bootloader-switch&rev=1522616358

Last update: **2018/04/01 20:59**