MIDIbox BLM 16x16+X PCB and case build guide

Introduction

In 2010, MIDIboxer TK. made huge waves with his BLM (button LED matrix) $16 \times 16 + X$. Never before had we seen such a mangle of duo LEDs, verowire and shift registers. The monome had been known for several years prior, as had smaller matrices for the SEQ, but the $16 \times 16 + X$ was a step further with its colourful LEDs and dedicated column, row and shift button. Arguably these pioneering devices inspired widespread development in commercial products such as the Novation Launchpad and Ableton Push.

TK.'s prototype was only ever meant to be that. In his words it took 40 hours and he was never prepared to do the same work again. Although the unit still works some five years later, the point-topoint wiring is somewhat fragile and the cheap tactile buttons are unergonomic. There were a few attempts at full PCB solutions, but the scale of the project is fairly daunting and sadly none eventuated.

My interest in a fresh start was piqued upon hearing of adafruit's UNTZtrument, which uses their own 4*4 silicone button pads. Years back we had considered pads from Sparkfun and Livid, but adafruit's are significantly smaller and cheaper. Rubberised buttons also have the best tactile feeling and don't click when they're pressed. One issue was the small internal space inside the button (only accepting a 3mm LED) so it was determined from the start to go for an SMT solution.

Concept of the project

Initial development of the BLM was done by TK., as noted elsewhere. A 17*17 button array is scanned using SCALAR modules consisting of 74HC165 (DIN) and 74HC595 (DOUT) shift register chips, the latter as current sinks via BJT transistors. Additional 595 chips drive LED anodes, while the cathodes share the same sinks as before. In total five SCALAR modules are present, one for the left-most and bottom "extra" column and row, and four for the remaining blocks of 16×4.

In the BLM 16×16+X PCB, the matrix is fully connected and all SCALAR modules are on-board, allowing for a cleaner build with less wiring, less physical space required and better signal integrity. A 4-layer PCB was used with one layer dedicated to ground/0V. There was also space to include four 60mm sliders which allow for additional control. The serial chains are brought out by a MIDIbox-standard J8/9 2*5 DIL header with the SC (clock), RC (latch), DIN and DOUT signals, along with +5V and 0v/ground. These may be interfaced with a MBHP Core8 or Core32 module, but most users will stick to the tailor-made miniCore (see later).

The following circuit changes were made:

- RC termination possible for SC and RC lines, although it seems unnecessary to do so.
- Pull-down resistors on current sink transistor bases (important when bases are floating and

should decrease power consumption).

- Schottky diodes from base to collector of current sink transistors. This helps to turn transistors "off" quicker and reduces "ghosting" in the matrix.
- Output enable (/OE) delay implemented on pin 13 of 74HC595 chips. At power up the series capacitor will charge, holding all outputs in a high impedance state to ensure all registers have been initialised. One delay circuit is provided for each SCALAR section.

For minimal external cabling, the BLM connects to a SEQ v4 via an 8-pin DIN connector. This combines MIDI in, MIDI out and power; the communications protocol sent and received by the BLM is standard MIDI. Most users will incorporate a Quad IIC board into their SEQ case, which is the simplest way to arrange the DIN8 connector, optocoupler and header pins.

Build guide

General considerations: read before building

- The 289 through hole diodes are the most tedious part of the build. They should be trimmed as short as possible before soldering from the rear (i.e. the same side as the component). If the legs protrude though too much then you'll have trouble getting the silicone button pads to sit flat. Note that it's not necessary to have the diode sitting flush to the PCB in fact the diodes must be raised over most of the surface mount transistors.
- I suggest that the PCB is initially clamped (using a scrap piece of material to protect it from the clamp) to the work space, otherwise your parts may jump around if the board gets bumped. If it is truly flush with your bench it will also help to keep the diodes/solder from going through the plated holes. Try to protect the exposed button pads on the PCB top by using a piece of clean paper or other material; don't damage the surface by scratching it.
- LEDs are a little bit sensitive; don't heat them for more than about 2 seconds at a time and apparently they don't like static discharges... As far as I know, the humidity warnings you get with them are only really applicable to oven reflow soldering.
- Rev 1.1 boards have quite small ground plane isolation, and the soldermask is somewhat prone to scratching. Take extra care when soldering capacitors and ICs that you don't accidentally short the +5V rail, as this will make troubleshooting difficult.

Parts list

The following parts are available from Mouser, you can try this shopping basket to save time.

http://www.mouser.com/ProjectManager/ProjectDetail.aspx?AccessID=e31c510729

	Quantity	Recommende	d Description
Resistors			
660-MF1/4DC1002F	4	4	10k through hole
652-CR1206FX-1002ELF	41 10	0	10k 1206
652-PTL45-15R0-103B2	4	4	10k slider, 15mm shaft, red LED
652-PTL45-10G0-102B2	-	-	lk slider, 10mm shaft

2025/09/17 19:23	3/5			MIDIbox BLM 16x16+X PCB and case build guide			
Resistor networks							
652-4816P-T2LF-10K	5	6		10k bussed (165 pullups)			
652-4816P-1LF-1K	5	6		<pre>1k isolated (current sinks)</pre>			
652-4816P-1LF-220	5	6		220R isolated (green LEDs, also			
red LEDs)				-			
652-4816P-1LF-56	5	6		56R isolated (blue LEDs)			
Consoltono							
Capacitors 647-TVX1C471MAD	1		1	470 E alactrolytic avial			
80-C1206C104K5R	1 23	50	1	470uF electrolytic axial 100n ceramic 1206			
647-F931C106MAA	23 5		10	100F tantalum 1206			
047-1951C100MAA	J		10				
Diodes							
512-BAT54 36	100			Schottky diode S0-23			
512-1N4148TR	289	300		1N4148 diode			
78-LS4148-GS18	5		10	4148 quadroMELF			
LEDs	200	200					
604-APTR3216ZGC	289	300		LED green 1206 reverse mount			
604-APTR3216QBC/D	289	300		LED blue 1206 reverse mount			
604-APTR3216SURCK	-	-		LED red 1206 reverse mount			
Transistors							
512-BC81840MTF	36	100		NPN BJT SO-23			
7.0							
ICs 595-SN74LVC1G17DBVR	3	10		Schmitt trigger, overvoltage			
tolerant S0-23-5	J	10		Schmitt trigger, overvottage			
595-SN74HC165DR	5		10	74HC165D SOIC			
595 - SN74HC595DR	15	20	10	74HC595D SOIC			
	15	20		7 1103332 3010			
Connectors							
523-T3507-000	1		1	DIN 8 panel connector			
523-T3504-001	2		2	DIN 8 plug			
	2	-		2x5 DIL header male, snap			
from a larger piece	_						
	1	-		2x5 IDC plug female (DIN8			
<-> miniCore)							
Hardware							
	40cm	-		10-way ribbon cable			
	20	-		M3 nut (stainless)			
	20	-		M3 washer (stainless)			
	1(+4)	-		M2 grub screw, 14 mm			
(stainless)							
	1(+4)	-		M2 nut (stainless)			
	1(+4)	-		M2 washer (stainless)			
	2	-		M3 standoff, 12mm male-			
female							
	8 wilding	-		M3 standoff, 25mm (for			
spacing PCB during building)							

Buttons 	18(19)	-	adafruit 4x4 silicone
Spacer acrylic	1	-	spacer cut from 3mm opaque

Parts notes


- You can choose either Blue+Green LEDs (recommended) or Blue+Red. You could interchange some Green for Red. Green+Red is not recommended as the colour mixing is poor.
- Slider height: I specified 15mm shaft sliders, you could change these for 10mm. 15mm will protrude 13mm out of the case, which might be a bit long. 10mm will only protrude 8mm, so they would be less likely to break off and will probably be a bit more sturdy. TK. suggests 1k should work, the others are too high in resistance to get good jitter-free values (10k sliders with the shorter shaft aren't readily available).
- You should use the indicated panel mount DIN, but a cheaper pair of DIN8 plugs might work.
- M2 hardware is a bit difficult to find in normal stores, but Boltbase on eBay has good deals.

Tools needed

- Soldering iron, I managed with a normal tip but it's a bit tricky with some components
- Solder, probably leaded. 0.5mm is strongly recommended for at least the ICs (1206 can be easily done with 1mm solder).
- Desoldering wick and/or solder pump. Useful when the pads get too much solder
- Tweezers to pick and place components
- Cutters for diodes and a few through hole components
- Good eyes or light and a loupe
- 2-3 small clamps
- Flat work surface
- Multimeter, test continuity between pads

Dimensions

Here are the dimensions for the button, hole and slider locations. Note that the unmarked mounting holes are M3 (3.2mm diameter)

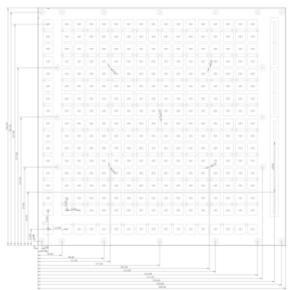

From: http://midibox.org/dokuwiki/ - MIDIbox

Permanent link: http://midibox.org/dokuwiki/doku.php?id=mididocs:seq:blm16x16_build_guide&rev=1511553002

Last update: 2017/11/24 19:50

